

Function/Hot Key Indicators

The **function keys** (F1 - F12 etc.) will act as **hot keys** when pressed while the **Fn** key is held down. In addition to the basic function key combinations; visual indicators are available when the hot key utility is installed.



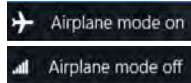



Keys	Function	Keys	Function
Fn + ~	Play/Pause (in Audio/Video Programs)	Fn + F8/F9	Brightness Decrease/Increase
Fn + F1	TouchPad Toggle 	Fn + F10	PC Camera Power Toggle 
Fn + F2	Turn LCD Backlight Off (Press a key to or use TouchPad to turn on)	Fn + F11	Airplane Mode Toggle 
Fn + F3	Mute Toggle	Fn + NumLk	Number Lock Toggle 
Fn + F4	Sleep Toggle	Fn + ScrLk	Scroll Lock Toggle 
Fn + F5/F6	Volume Decrease/Increase	Caps Lock	Caps Lock Toggle 
Fn + F7	Display Toggle		

Table 1 - 5 - Function & Hot Key Indicators